
WEATHERPROOFING


WHAT TO DO FIRST

FIRST: INSULATE CEILING: MINIMUM 6" OR R = 20 MAXIMUM 10" OR R = 35.




SECOND: INSTALL STORM WINDOWS.

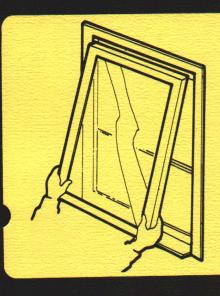

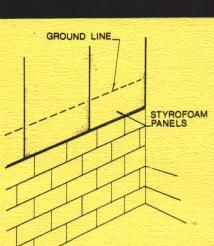


FOURTH: INSULATE BASEMENT WALL ABOVE GROUND.

FIFTH: INSULATE WALLS.

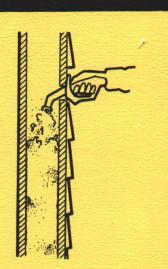



COOPERATIVE EXTENSION SERVICE AND FAMILY LIVING EDUCATION

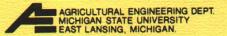

E 1300

Cooperative Extension Service Programs are open to all without regard to race, color, or national origin. Issued in furtherance of cooperative extension work in agriculture and home economics, acts of May 8, and June 30, 1914, in cooperation with the U.S. Department of Agriculture. Gordon E. Guyer, Director, Cooperative Extension Service, Michigan State University, East Lansing, MI 48824

1P-4M-7:79-UP, Price 5 cents. Single copy free to Michigan residents.

